


公司名称: 松灵机器人(深圳)有限公司
地址: 广东省深圳市南山区西丽仙
洞路33号天珑大厦12楼1201

✉ sales@agilex.ai
support@agilex.ai

☎ 86-19925374409

🌐 www.agilex.ai


Company Name : Songling Robot (Shenzhen) Co., Ltd
Address : Room1201,Levl12,Tinno Building, No.33
Xiandong Road, Nanshan District, Shenzhen,
Guangdong Province, China.

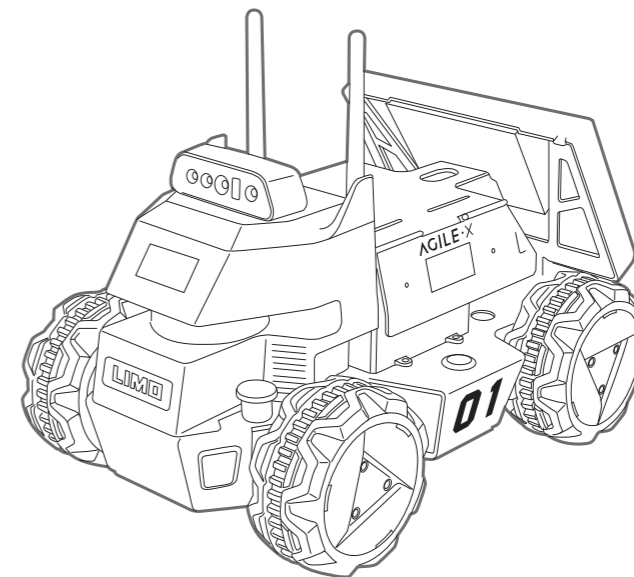

LIMO

Quick Start Guide

快速入门手册


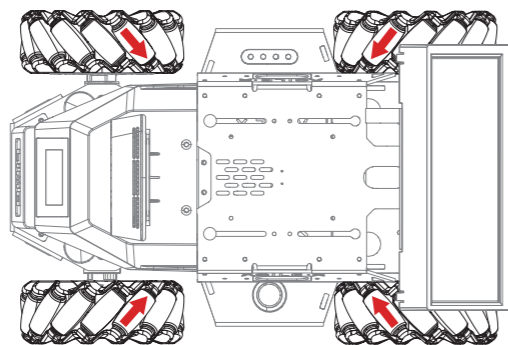


注意:确保每个麦轮安装角度!

橡胶胎安装


1. 轮胎齿轮中间对准螺丝孔, 将轮胎套上;

2. 对准孔位安装轮毂盖, 拧紧M3*12mm螺丝。

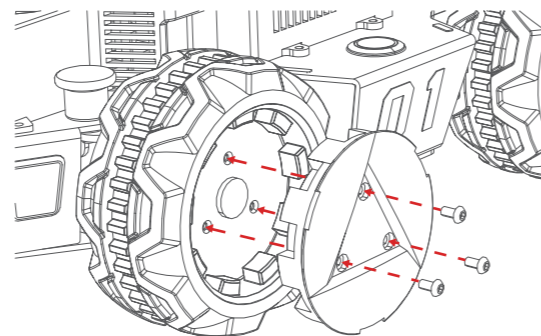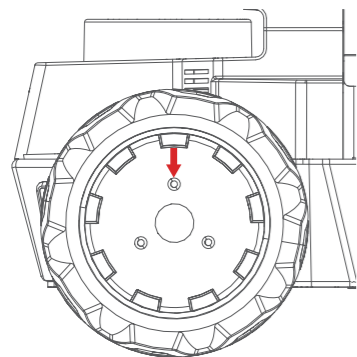

Operation


1. Long press the button to turn on or turn off the LIMO.
(Short press the button to stop the LIMO while using).

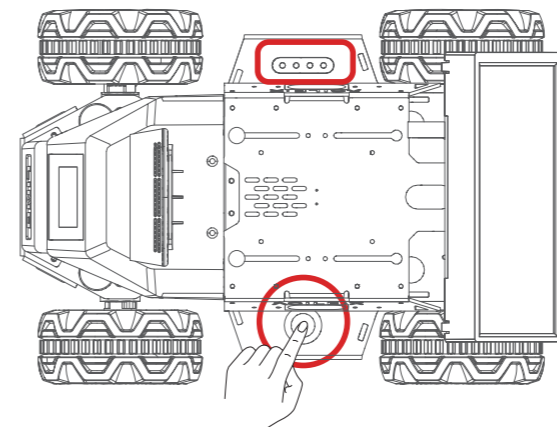

Description of battery indicator

Light Status	Meaning
●●●● Solid Green /flashing	Sufficient battery
●●●● Red light flashing	Low battery

2. Check current drive mode of LIMO by observing the status of the front latch and the indicators.

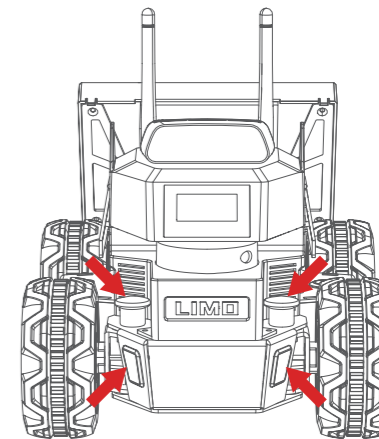

Description of latch status and front indicator color

Latch status	Indicator color	Current mode
	Blinking red	Low battery/main controller alarm
	Solid red	LIMO stops
Inserted	Yellow	Four-wheel differential/tracked mode
	Blue	Mecanum wheel mode
Released	Green	Ackermann mode

3. APP Instructions

1 Scan the QR code below to download the App, IOS APP can be downloaded from the AppStore by searching for AgileX.



IOS



Android

2 Open APP and connect to Bluetooth



Click the setting icon

3 Instructions on remote control interface

Turn on/off the controller

Drive mode switch


Status

Bluetooth signal

Speed

Motion control


Direction control

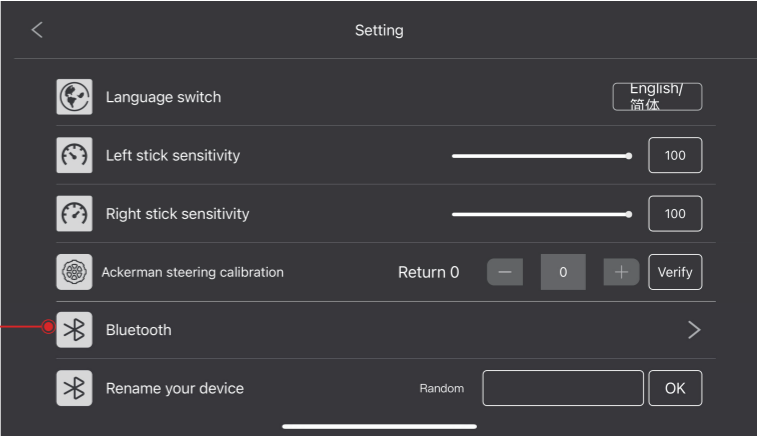



Click on the Bluetooth icon to search for LIMO_XXXXXX



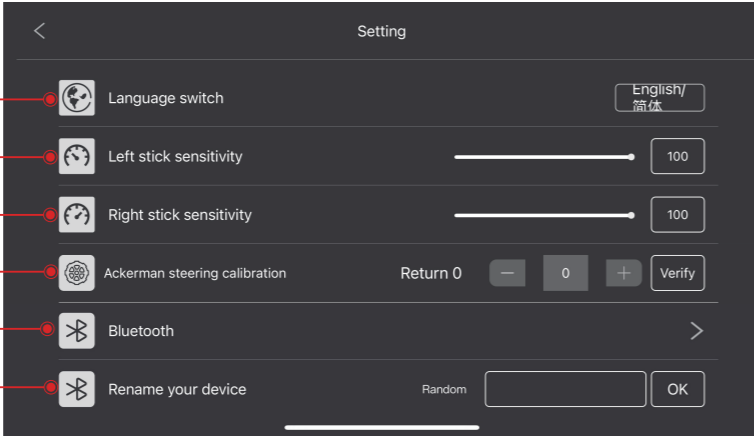

4 Settings

 



Switch language  Language switch English/ 简体中文

Adjust the control sensitivity of the left stick  Left stick sensitivity 100

Adjust the control sensitivity of the right stick  Right stick sensitivity 100

LIMO steering servo calibration in Ackerman mode  Ackerman steering calibration Return 0 - 0 + Verify

 Instructions on the settings interface  Bluetooth >


Change the name of LIMO Bluetooth (Note: After clicking OK, the Bluetooth connection will be disconnected, and LIMO needs to be restarted to be connected again)  Rename your device Random OK



5 Instructions on mode switching through APP

- **Ackermann:** manually switch to the Ackermann mode through the latches on the LIMO, the APP will automatically recognize the mode and the latches are released.
- **Four-wheel differential:** manually switch to the Four-wheel differential mode through the latches on the LIMO, the APP will automatically recognize the mode and the latches are inserted.
- **Mecanum:** switch to the Mecanum mode through APP at the requisite of latches inserted and the Mecanum tiers are installed.


Drive mode switching


1. Switch to Ackermann mode(green light):

Release the latches on both sides, and turn 30 degrees clockwise to make the longer line on the two latches points to the front of the LIMO . When the LIMO indicator light turns green, the switch is successful;

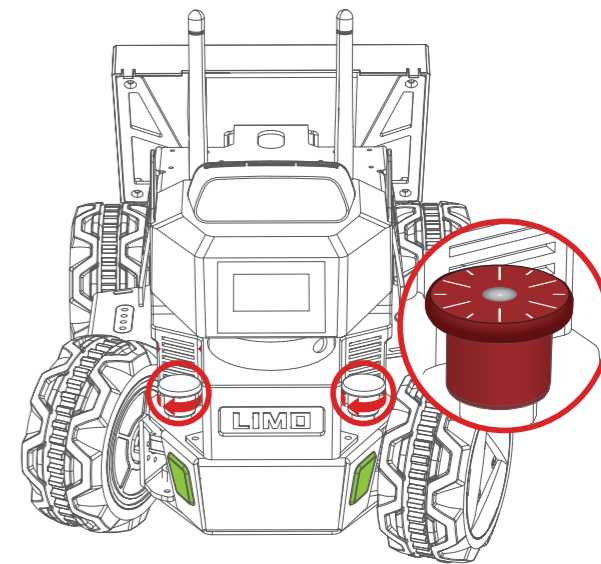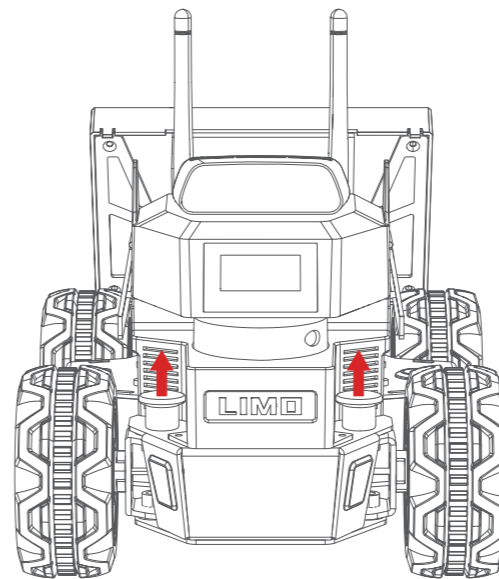


2. Switch to four-wheel differential mode(yellow light):

Release the latches on both sides, and turn 30 degrees clockwise to make the shorter line on the two latches points to the front of the vehicle body . Fine-tune the tire angle to align the hole so that the latch is inserted. When the LIMO indicator light turns yellow, the switch is successful.

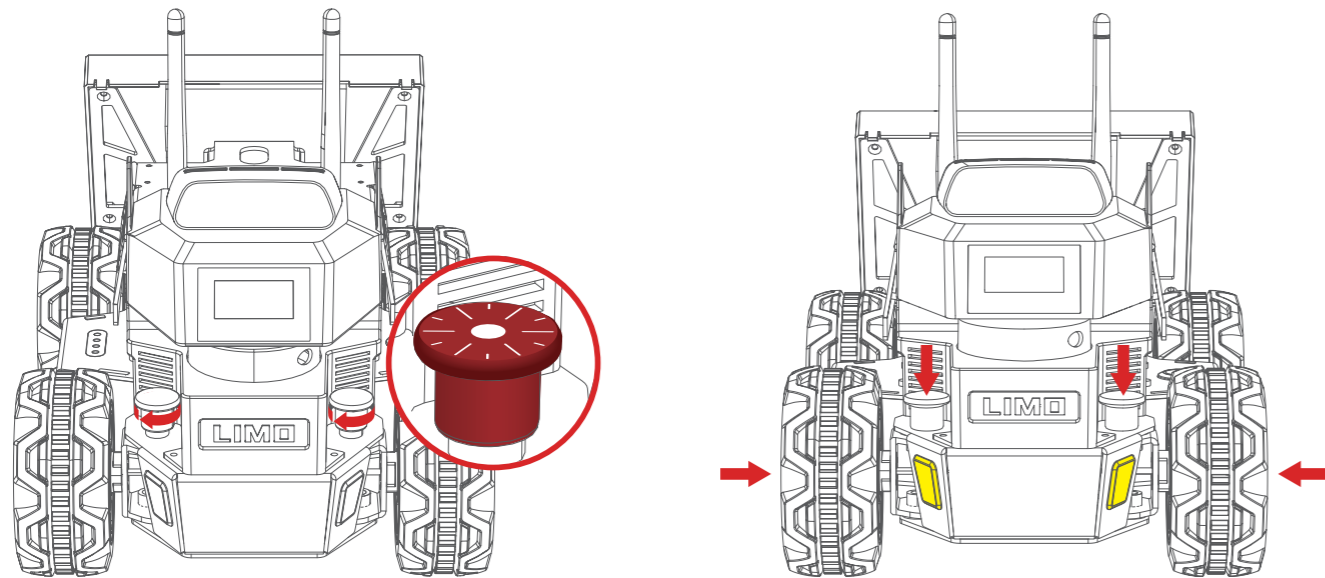


3. Switch to track mode(yellow light):

In the four-wheel differential mode, just put the tracks on to switch to the tracked mode. It is recommended to put the tracks on the smaller rear wheel first. In the tracked mode, please lift the doors on both sides to prevent scratches;

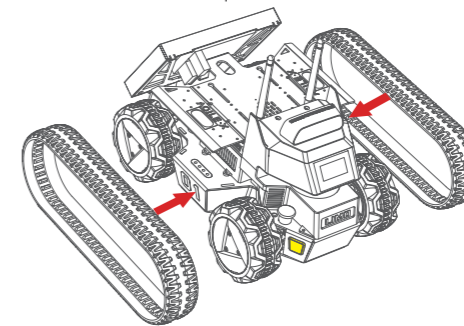



4. Switch to Mecanum mode(blue light):

① When the latches are inserted, first remove the hubcaps and tires, leaving only the hub motors;

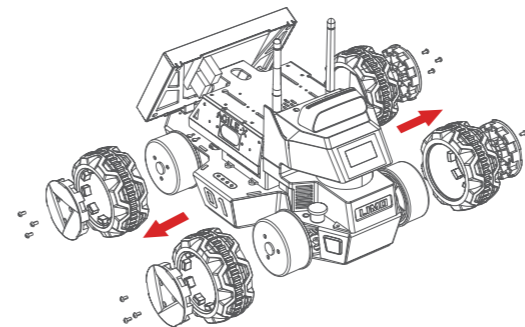

② Install the Mecanum wheels with the M3*5 screws in the package. Switch to the Mecanum mode through APP, when the LIMO indicator light turns blue, the switch is successful.

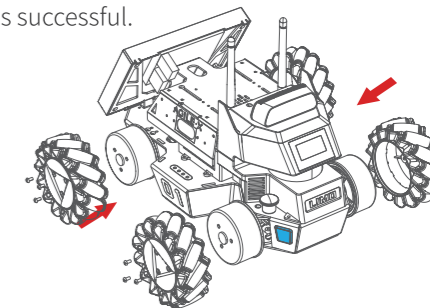


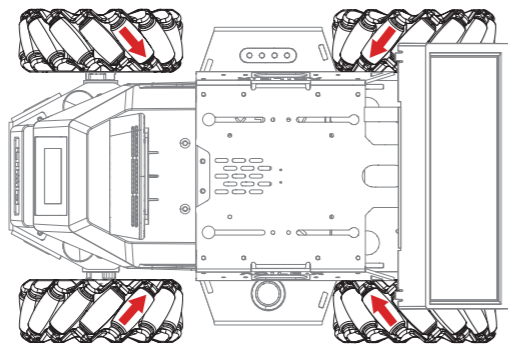

Note: Make sure that each Mecanum wheel is installed at the right angle as shown above.

Rubber tire installation

1. Align the screw holes in the middle of the rubber tire mounting gear, and wear the tire on;

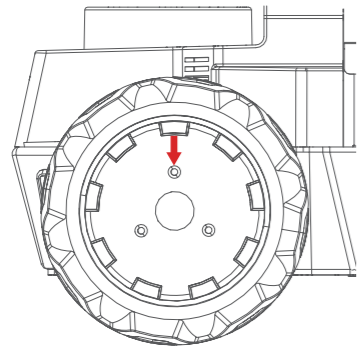

2. Align the holes to install the hubcap, and tighten the **M3*12mm** screws.

